

MIDLAND G7/G7E PRO

DUAL BAND (PMR446-LPD) TRANSCEIVER
PMR446 TRANSCEIVER

› USER MANUAL



Coverage*



* Depending on terrain

MIDLAND®

Index

Content of the package	1	MON button (Monitor)	15
Coverage (referred to PMR frequency band)	1	Scanning all channels	15
Main functions	2	Display backlight	15
Above all....Safety!	3	Keypad lock	15
Warnings	3	MENU button	16
Batteries	3	Channel selection	16
Identifying the parts	4	CTCSS/DCS tones selection	16
LCD Display	4	Choosing high or low transmission power (PMR band)	17
Transceiver	6	VOX function	17
Preparing the transceiver	8	Vibra-Call function	18
Recharging the NIMH batteries (4 x AA)	8	ROGER BEEP (End transmission tone)	18
Recharging the NIMH battery pack PB-ATL/G7 800 mAh	9	CALL function	18
Recharging the Li-Ion battery pack 'PB-PRO' (optional)	9	Dual Watch function	19
Recharge	10	Keypad beep	19
Memory effect of rechargeable batteries	10	Troubleshooting and radio reset	19
Installing/removing the battery pack	12	Reset	19
Basic operation	13	Technical specifications	20
Turning on/off	13		
Volume control	13		
Transmission and reception	13		
Channel selection	14		
Selecting the PMR446 bands - 16CH or 8CH	14		

Content of the package

Depending on the version, the content changes.

Single packing:

- 1 transceiver with belt clip
- 1 wall adaptor
- 4 AA rechargeable batteries 1800mAh
- quick guide

Twin packing:

- 2 transceivers with belt clip
- 1 wall adaptor
- 1 double desktop charger
- 2 battery packs 800mAh
- quick guide


It is available the optional Li-Ion battery pack 1200mAh mod. 'PB-PRO'.
If any item is missing or damaged, contact immediately your supplier.

Coverage (referred to PMR frequency band)

The maximum range depends on terrain condition and is obtained during use in an open space.

The only limitation to maximum possible range are environmental factors such as blockage caused by trees, buildings, or other obstructions. Inside a car or a metallic constructions, the range can be reduced. Normally the coverage in the city, with buildings or other obstructions is about 1 or 2 Km. In open space but with obstructions like trees, leaves or houses the maximum possible range is about 4-6 Km. In open space, without obstructions and in sight, like for example in mountain, the coverage can be more than 12 Km.

Main functions

- **G7 Pro:** Dual Band LPD/PMR transceiver
 - **G7E Pro:** PMR446 transceiver
 - 16 new PMR446 channels*
 - 85 Channels: 16 PMR446 + 69 LPD
 - Extended frequency band: 446.00625 – 446.19375MHz*
 - Dual PTT for high/low power transmission
 - Side Tone: end transmission noise muffler
 - New audio level
 - VIBRACALL function
 - LCD display with backlight
 - Low battery indicator
 - Auto power save: automatic current economy circuit
 - 38 CTCSS and 104 DCS tones in TX and RX
 - CALL button with 5 tones selectable
 - Automatic squelch adjustment
 - Buttons for the channel selection
 - SCAN function
 - Keypad lock
 - Hi/low power selection (PMR band)
 - Roger Beep on/off
 - VOX for hands-free communications
 - Dual Watch
 - 2 Pin jack for ext. mike / ext. speaker / battery recharge
- * Extended PMR446 band: it is possible to use either the PMR446 traditional band or a “new” one (8 further PMR446 channels).
-  The manufacturer, with its effort to constantly improve product quality, reserves the right to change characteristics and features without prior notice.

Above all....Safety!

Warnings


- ! *Do not open the radio for any reason! The radio's precision mechanics and electronics require experience and specialized equipment; for the same reason, the radio should under no circumstances be realigned as it has already been calibrated for maximum performance. Unauthorized opening of the transceiver will void the warranty.*
- ! *Do not use detergents, alcohol, solvents, or abrasives to clean the equipment. Just use a soft, clean cloth. If the radio is very dirty, slightly dampen the cloth with a mixture of water and a neutral soap.*

Batteries


- ! *Do not try to charge alkaline batteries or non rechargeable batteries. Make sure that when you charge the radio, only rechargeable NI-MH batteries should be contained in the battery compartment! It is very dangerous attempting to recharge other types of batteries (for example alkaline or manganese batteries). Batteries which are not suitable to be recharged may leak, explode or even burn and cause damage!*
- ! *Using a different battery charger other than the one specified can cause damage to your device or may even cause explosions and personal injuries.*
- ! *Do not throw batteries into fire or place them near heat as this may cause explosions or personal injuries. Dispose of the batteries according to procedures set out by local regulations.*
- ! *Do not mix old and new batteries or batteries of different types or batteries which have been used in different manners.*

Identifying the parts

LCD Display

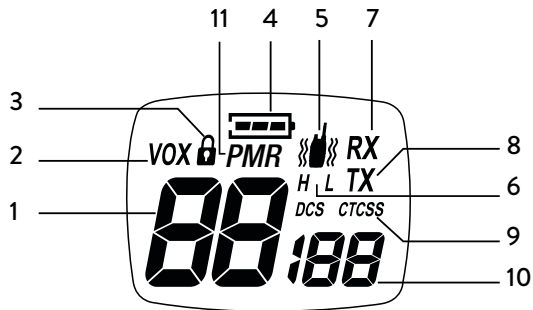

1. **00** - These two large digits indicate the selected channel.
2. **VOX** - Function activated
3. **🔒** - Keypad lock activated
4. **🔋** - Battery status indicator
5. **📞** - Vibra-Call function activated
6. **H/L** - Indicates the high / low power selection in transmission (only in PMR band)
7. **RX** - Radio in rx mode (busy channel)
8. **TX** - Radio in transmission (PTT pressed)
9. **DCS/CTCSS** - Type of sub-audio tone selected
10. **Code of the selected CTCSS or DCS tone**
(CTCSS: 1-38; DCS: 1-104)
11. **PMR** - This simbol indicates that the radio is operating on the new PMR446 channels.

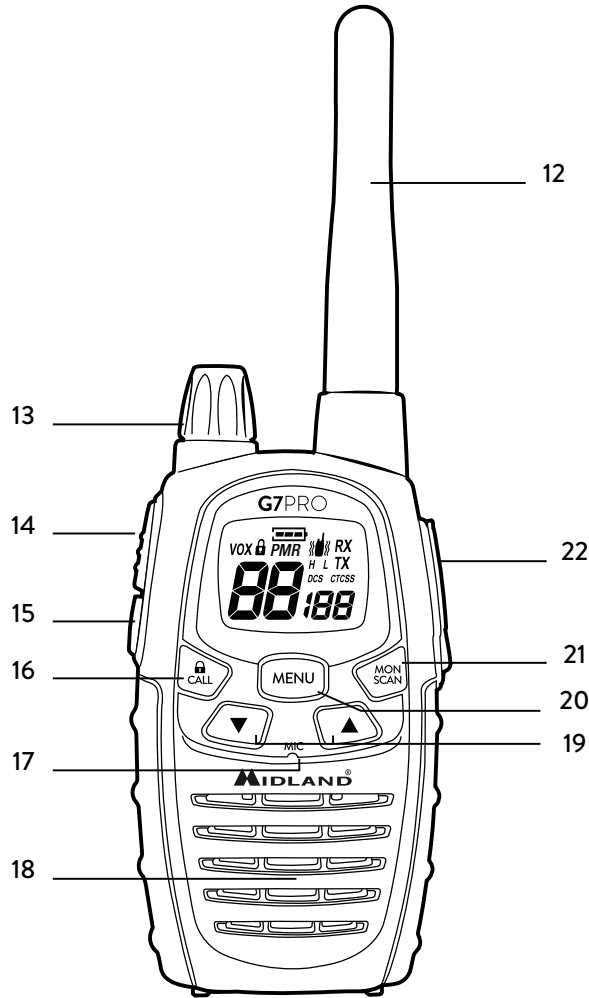

12. **Antenna**

13. **OFF/VOLUME knob** - To switch on/off the radio and to adjust the volume.

14. **PTT** - Press to transmit.

15. **BOOST** - Press to transmit in high power.

16. **CALL/** - to send a call to the selected channel. If you keep it pressed for about 3 seconds, the keypad lock is activated.

17. **MIC** - Built-in microphone

18. **Built-in Speaker.**

19. **▲ ▼ controls** - To change the settings in the **MENU**.

20. **MENU** - Press this control to enter the radios **MENU**

21. **MON/SCAN** - Press this button once to activate **SCAN**. Keep it pressed for about 2 seconds to activate the **Monitor** function, that temporarily cuts off the squelch (for weak signals)

22. **SPK | MIC/CHG** (under the protective cover) - To connect to external audio devices such as microphones, headphones, chargers, etc

Preparing the transceiver

The radio can be recharged with different type of batteries: here below the possibilities.

Note: To optimize the recharge process, we suggest you switch off the radio to recharge it.

Recharging the NIMH batteries (4 x AA)

Place your transceiver into the cradle of the desktop charger or connect the MW904 wall adaptor to the proper jack of the radio.

This type of batteries is recharged with a constant current, either you use a desktop charger or MW904; therefore the recharge time depends from the recharge status and from the batteries capacity.

There's no evidence when the recharge is finished, therefore we suggest you detach the wall adaptor from the radio or remove **G7 Pro** from the desktop charger cradle once the recharge is complete.

Here below some information about the recharge time (indicative) for some batteries of different capacity:

Battery capacity mAh	Approx. recharge time (hours)
1200	5
1800	7
2100	8

- When the radio is in the charger cradle, the processor makes a sort of checking on the battery; the led on the charger will light up for 10 seconds, then will turn off and the recharge will start.
- The battery icon on the radio's display will be blinking for all the recharging process, as well as the red led will be lighting up on the desktop charger.

Recharging the NIMH battery pack PB-ATL/G7 800 mAh

Place your transceiver into the cradle of the desktop charger or connect the MW904 wall adaptor to the proper jack of the radio.

This type of batteries is recharged with a constant current, either you use a desktop charger or MW904, therefore a complete recharge takes about 5 hours.

There's no evidence when the recharge is finished, therefore we suggest you detach the wall adaptor from the radio or remove **G7 Pro** from the desktop charger cradle after 5 hours.

- When the radio is in the charger cradle, the processor makes a sort of checking on the battery; the led on the charger will light up for 10 seconds, then will turn off and the recharge will start; the battery icon on the radio's display will be blinking for all the recharging process, as well as the red led will be lighting up on the desktop charger.

Recharging the Li-Ion battery pack 'PB-PRO' (optional)

Place your transceiver into the cradle of the desktop charger or connect the MW904 wall adaptor to the proper jack of the radio.

The recharge of the Li-Ion battery pack is managed by a radio processor and the battery status can be checked by the icon on the display and by the led on the desktop charger

- The recharge status is indicated by the led on the desktop charger and by the battery icon blinking on the display of the radio;
- When the recharge is complete, the led will turn off and the battery icon on the display will be full of bars and fix.
- When the radio is in the charger cradle, the processor makes a sort of checking on the battery status: in this step, the led on the desktop charger will light up for 10 seconds, then will turn off and the recharge will start.
- To optimize the recharge of the Li-Ion battery pack, in the final phase the processor will alternately charge and pause for almost one minute (the led will turn off).
- If the radio is placed in the desktop charger switched on, when the recharge is complete the led will blink.

Recharge

When you place the radio into the charger cradle, at first the charger makes a sort of checking on the battery status. In this phase, the led of the desktop charger will turn on for 10 seconds, then will turn off for the following 10 seconds and will switch on again to indicate the charging process.

While the radio is being charged, the led on the desktop charger will be on and the battery icon on the display will be blinking.


When the recharge is complete, the led will switch off and the battery icon will be steady and will show all its bars.

The recharging time will depend on the battery level and its capacity. The max recharging time however is about 14 hours, after which the recharge will stop. This time is referred to a complete recharge of AA 1800mAh batteries.

Memory effect of rechargeable batteries

Rechargeable NiMH (Nickel-Metal-Hydrate) batteries are affected by what is known as the “memory effect”. This phenomenon is associated with a drastic reduction of battery autonomy and is triggered if the batteries are regularly charged before being fully discharged and/or are not completely recharged. To avoid the memory effect:

- When possible, recharge the batteries only when they are completely discharged (until the device turns itself off during normal use)
- Do not disconnect the battery charger before the time indicated for a full battery charge.

 *The memory effect should not be confused with the normal battery life, which is 300-400 cycles of charge/discharge on average. It is completely normal for operating duty to decrease when the batteries have reached the end of their life; at this point, you will need to substitute the batteries.*


Installing and removing the belt clip

With the belt clip you can easily attach the transceiver to your belt.

The clip however, must be removed in order to install or change the batteries.

To remove the clip follow the indication of picture 1.

To fix the clip back to the device slot it in the guides at the back of the transceiver until it clicks into place.

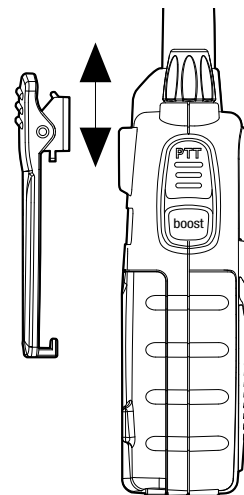

PICTURE 1


Installing/removing the battery pack

Removal

1. Remove the belt clip as explained in paragraph “Installing and removing the belt clip”;
2. Open the battery compartment as shown in picture 2;
3. Remove the battery pack;
4. Close the battery cover and fix the belt clip.

Installation

1. Remove the belt clip as explained in paragraph “Installing and removing the belt clip”;
2. Insert the battery pack into the battery compartment;
3. Close the battery cover and fix the belt clip.

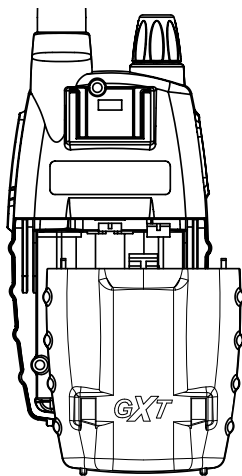

PICTURE 2

Basic operation

Turning on/off

To turn on the transceiver, turn the **VOLUME** knob clockwise until you hear it clicks: the LCD display will light up and do an Auto-Test. Subsequently you will hear 2 beeps of different tones.

To turn off the transceiver, turn the knob counter-clockwise until you hear another click.

Volume control

Turn the knob **VOLUME** to about half way and adjust it to a comfortable level as soon as you receive a signal. If you do not receive a signal you can use the button **MON/SCAN** described in par. “MON button”.


Transmission and reception

The **PTT** key has a dual function, as it is composed by 2 parts: a bigger PTT and a red one, smaller, identified with “**boost**”.

When you press the bigger PTT the transceiver transmits with high or low power (depending on the setting of the **MENU: H** or **L**); while the smaller PTT (Boost) always transmits with high power.

To transmit:

1. Make sure that no one else is currently talking on the selected channel;
2. Keep button **PTT** firmly pressed: **TX** will appear on the display;
3. Before you start talking wait for a fraction of a second then speak normally, in the direction of the microphone, and hold the device at a distance of about 5 cm.
4. When you have finished, release the **PTT**: **TX** will disappear from the display;
5. When the radio is in reception mode (**PTT** not pressed) you will automatically receive any communication (**RX** displayed).

 During transmission and reception try, as far as possible, to keep the antenna in vertical position and to avoid obstacles towards the direction of the other party.

Channel selection

1. Press the **MENU** button. The number of the channel will start flashing on the display.
2. Press the scroll buttons **▲▼** till you select the desired channel.
3. **PMR446 new band:** from 1 to 16.
4. **PMR446 traditional band:** from P1 to P8.
5. **LPD:** from 1 to 69.
6. Press the **PTT** button to confirm, or wait for 5 seconds.

Channel P8 has been set at factory for the “Emergency” function; we suggest that you do not use it for general communications!

Selecting the PMR446 bands - 16CH or 8CH

G7 PRO can operate on two PMR446 bands: a traditional band with 8 channels and a new one with 16 channels.

- While with the **16 channels**, the operating band is extended up to 446.2Mhz.
- With the **8 channels** it is possible to communicate with all radios working on the operative band 446Mhz-446.1Mhz.

When **G7 PRO** is set on the “new channels”, the display will show “PMR”.

How to switch the PMR446 bands

1. Switch off the radio.
2. Turn it on by pressing **MENU** and **MON/SCAN**.
3. The display will show “_ _”.
4. Press the following keys in the correct sequence: **▼ - MENU - ▲**; the symbol “_ _” on the display will be replaced by a series of “o”. In case of wrong sequence, **G7 PRO** will exit the procedure.
5. At the end of the sequence, the display will show the frequency band currently in use. Now you can select “P8”(traditional band) or “P16”(new band) by means of the **▲/▼** controls.
6. Press **PTT** to confirm your selection.

MON button (Monitor)


The **Monitor** button is for temporarily excluding (opening) the squelch, in order to listen to signals that are too weak to keep the squelch permanently opened. By excluding the squelch you will avoid listening the communication “chopped” by the squelch. In order to activate the Monitor function, so as to listen to all traffic on the selected channel, keep pressed the **MON/SCAN** button for about 2 seconds. Keep pressed the button **MON/SCAN** for about 2 seconds to disable this function.

Scanning all channels

Midland G7/G7E Pro can automatically search for signals throughout the PMR/LPD bands by scanning, i.e. selecting the channels in rapid sequence. When a signal is detected, the scanning pauses on that channel and you can transmit by pushing **PTT**. If you press **PTT** during scanning you can transmit on the channel from which the scanning started. The scroll buttons **▲/▼** allow you to change the direction of scanning (from lower channels to higher ones or vice versa) and therefore to skip communications which are of no interest. Press briefly the button **MON/SCAN** to start scanning. If you want to stop it, press again **MON/SCAN**. Your transceiver will go back to the channel from which the scanning originally started.

Display backlight

If there is insufficient light to read the display you can press the **MENU** button to switch the display back light on for about 5 seconds.

 *Switching the backlight on the display adds an additional drain on the battery. Try to make a moderate use of this.*

Keypad lock

Keep pressed **CALL/🔒** for about 5 seconds and **🔒** will be displayed as confirmation. Only **PTT** and **CALL/🔒** remain active. To disable this function, keep pressed again **CALL/🔒** for 5 seconds approx.

Power Save


The battery power saving feature enables a reduction in the consumption of up to 50%; power saving comes on automatically when the transceiver does not receive any signal for more than 5 seconds. When the batteries are discharged, **bt LO** appears on the display: replace the batteries or recharge the battery pack.

MENU button

Channel selection

Press once the **MENU** button. The number of the channel will start flashing on the display. Press the scroll buttons **▲/▼** to scroll up or down the PMR and then LPD channels till you select the desired channel.

Press the **PTT** button to confirm, or wait for 10 seconds.

 Refer to the table of frequencies.

CTCSS/DCS tones selection

Midland **G7/G7E Pro** can receive in two modes:

- a. **Open traffic:** in this case you will hear any communication transmitted on the selected channel;
- b. **Group mode CTCSS/DCS:** CTCSS/DCS tones are access keys that allow you to receive only messages coming from parties using the same channel and code. The speaker will remain muted until the correct tone is received.

To activate 1 of 38 different CTCSS/104 DCS tones in RX and TX

1. Turn on the radio.
2. Select the desired channel.
3. Press twice **MENU** until the Display shows **oF**.
4. By pushing the **▲/▼** controls the display will show **CTCSS (ct** blinking) or **DCS (dc** blinking); press **MENU** to enter the CTCSS or DCS tones. Now select the desired tone with the **▲/▼** keys.
5. To confirm the setting, press the **PTT** key or wait for approximately 10 seconds.


Choosing high or low transmission power (PMR band)

Batteries are drained more quickly during transmission. In order to extend the battery life you can select the low power when transmitting over short distances.

Procedure:

1. Press the **MENU** button for 3 times and **Pr H** will be displayed.
2. Select **L** using the scroll buttons **▲/▼**.
3. Press **PTT** to confirm, or wait for 10 seconds.

If you want to transmit a longer distance repeat the above procedure to select the high power. At step 2 select **H**. When the batteries are in good conditions, high power is 500mW, whereas low power is 10mW.

 A low battery level during transmission will reduce the performance of your device.

VOX function

Midland **G7/G7E Pro** enables hands free conversations through VOX function. You can enable VOX function with or without accessories. **G7 Pro** is supplied with 3 different VOX selections:

- **VOX standard (Vo** on the display)
- **VOX baby-sitting (Vb** on the display)
- **VOX Bike (Vc** for motorbikers)

All these options can be selected on two levels as follows:

1. To activate VOX function press the **MENU** button 4 times in the PMR band and **VOX** will appear on the display.
2. Use the scroll **▲/▼** buttons to select the desired setting:
OFF: Disabled;
3. **Vo1/Vo2 - Vb1/Vb2 - Vc1/Vc2**
where 1 means 1st Level (low sensitivity) and 2 means 2nd Level (high sensitivity);
4. Press **PTT** to confirm or wait for 10 seconds.

To disable the VOX function follow the instructions above and select option **oF**.


Vibra-Call function

Midland **G7/G7E Pro** is equipped with the “Vibra-Call” feature, which provides a vibration for incoming calls.

To activate it, follow these steps:

1. In the PMR band, press the **MENU** button for 10 times, until the display shows **!**;
2. Use the **▲/▼** buttons to disable or enable this feature (**on**: enables, **oF**:disables);
3. Push **PTT** to confirm or wait for 10 seconds.

 *Everytime Midland G7/G7E Pro receives a call, it will vibrate.*

 *When the Vibracall function is enabled, the call tone won't be heard.*

ROGER BEEP (End transmission tone)

Every time you end transmission (PTT released), Midland **G7/G7E Pro** gives out a sound that indicates to the other party that s/he can start talking. This function is factory disabled.

To activate it:

1. Press six times the **MENU** button in the PMR band until the display shows **“rb oF”**;
2. Using the scroll buttons **▲/▼** select **“on”** and **“rb on”** will be displayed;
3. To confirm the roger beep activation, press **PTT** button or wait for 10 seconds.

CALL function

Midland **G7/G7E Pro** can send 5 different call tones. To send this audio signal to other users, press the **CALL/🔒** key.

To select the call tones:

1. Push the **MENU** button 7 times in the PMR band, until the display shows **“CA 1”**.
2. By pushing **▲/▼** you will hear the 10 pre-set melodies.
3. Confirm by pressing the **PTT** key or wait for 10 seconds.

Now, each time your Midland **G7/G7E Pro** sends out a tone call, it will beep with the selected melody.

 *If the Vibracall function is activated (See par. “Vibra-call function”), the call tone won't be heard.*

Dual Watch function

This function allows the monitoring of 2 channels of your choice.

Procedure:

1. Select one of the 2 channels you want to monitor.
2. Press 9 times the **MENU** button in the PMR band until the display shows **“TX oF RX”**.
3. With the **▲/▼** button select the second channel to monitor.
4. Push the **PTT** key or wait for 10 seconds for confirmation.

To disable the function, press the **MON/SCAN** button.

Keypad beep

To deactivate the keypad beep, follow these steps:

1. Press for 8 times the **MENU** button in the PMR band, until **“bP on”** is displayed.
2. Use the **▲/▼** buttons until the display shows **“bP of”**.
3. Confirm by pushing the **PTT** or wait for 10 seconds.

Now you won't hear any beep at the pressure of any button.


Troubleshooting and radio reset

Your Midland **G7/G7E Pro** is designed to provide you with years of optimal performance. If for some reason problems arise, refer to this chapter before contacting a service centre in your region.

Reset

If your transceiver experiences a logical malfunction (improper symbols on the display, blocking of functions, etc.), it may not be experiencing a true failure, but rather a problem caused by external factors. For example, it may have an incorrect setting brought on by a noise or spikes in the electrical system during battery recharging. In such cases, you can reset the transceiver to its factory-programmed settings, by resetting all parameters:

1. Turn off the transceiver
2. Keep pressed the **▲** button and turn on the radio at the same time. All the functions will be reset ex-factory.

 *Before you go ahead with the reset, we recommend that you take note of all the setting you have carried out as they will be deleted.*

Technical specifications

Channels	Traditional band:	8 PMR446 + 69 LPD
	New band:	16 PMR446 + 69 LPD
Frequency	PMR446 traditional band:	446.00625 ÷ 446.09375MHz
	PMR446 new band:	446.00625 ÷ 446.19375MHz
	LPD	433.075 - 434.775MHz
Channel spacing	12.5 KHz (PMR); 25 KHz (LPD)	
Power supply	6+/- 10% Vdc	
Temperature	from -20° to +55°C	
Dimensions (w/o batteries)	58 (L)x 122 (H)x34 (D) mm	
Weight (w/o batteries)	123gr	
Duty cycle	TX 5%, RX 5%, stand-by 90%	
Category	B	
Transmitter		
Output power	10 or 500 mW (Selectable)	
Modulation	FM	
Spurious rejection	within European legal terms	
Receiver		
Sensitivity @ 12dB Sinad	0,35µV	
Adjacent channel rejection	70dB	
Audio output power	300mW @ 10% THD	
Jack for ext.mike and recharge	stereo 2,5 mm	
Jack for ext. speaker	mono 3.5 mm	
Maximum transmission time in an hour	6 minutes, equivalent to a duty cycle of 10%	

Specifications are subject to change without notice.

WARNING: Direct plug-in ac/dc power supply must be used for disconnecting the transceiver from the mains; the desktop charger must be positioned close to the unit and easily accessible.



All articles displaying this symbol on the body, packaging or instruction manual of same, must not be thrown away into normal disposal bins but brought to specialised waste disposal centres. Here, the various materials will be divided by characteristics and recycled, thus making an important contribution to environmental protection.

Prodotto o importato da: **MIDLAND EUROPE s.r.l.**

Via R. Sevardi 7 - 42124 Reggio Emilia Italia

www.midlandreurope.com

L'uso di questo apparato può essere soggetto a restrizioni nazionali.

Prima dell'uso leggere attentamente le istruzioni.

Produced or imported by: **MIDLAND EUROPE s.r.l.**

Via R. Sevardi 7 - 42124 Mancasale Reggio Emilia Italy

Imported by: **ALAN - NEVADA UK**

Unit 1 Fitzherbert Spur Farlington Portsmouth Hants.

P06 1TT - United Kingdom

www.nevada.co.uk

The use of this transceiver can be subject to national restrictions.

Read the instructions carefully before installation and use.

Importado por: **MIDLAND IBERIA, SA**

C/Cobalt, 48 - 08940 Cornellà de Llobregat (Barcelona - España)

www.midland.es

El uso de este equipo puede estar sujeto a la obtención de la correspondiente autorización administrativa.

Lea atentamente las instrucciones antes de usar el equipo.

Vertrieb durch: **ALAN ELECTRONICS GmbH**

Daimlerstraße 1g - D-63303 Dreieich Deutschland

www.alan-electronics.de

Die Benutzung dieses Handfunkgerätes ist von den landesspezifischen Bestimmungen abhängig.

Vor Benutzung Bedienungsanleitung beachten.

Importé par: **ALAN FRANCE S.A.R.L.**

5, Rue Ferrie, Zac les Portes du Vexin 95300 Ennery - France

www.alan-midland.fr

L'utilisation de cet appareil peut être sujet à des restrictions nationales.

Avant l'utilisation, lire les instructions.



MIDLAND®