BTR1 ADVANCED




HIGH DEFINITION SOUND BY RCF






ON/OFF


DESCRIPTION OF BUTTONS

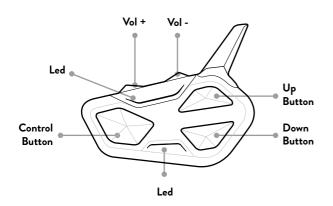

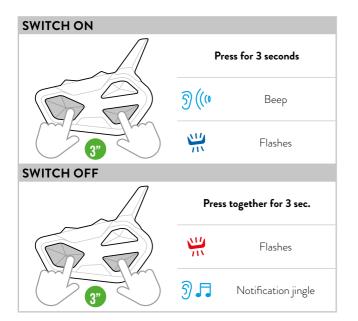


PAIRINGS


DESCRIPTION OF BUTTONS

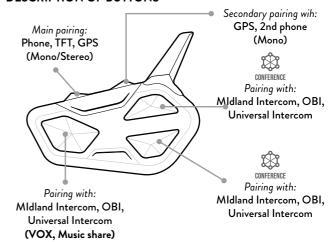


To carry out any pairing, you need to access Settings. If the Control button is pressed less than 7 seconds, the device will turn on instead of accessing Settings. Should this happen, repeat the procedure.

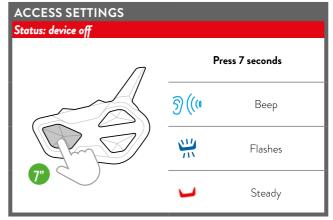



PAIRINGS

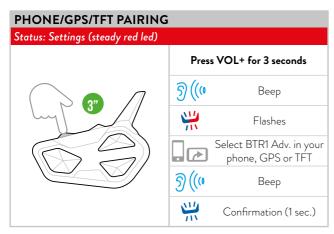

Note: to pair a second device in mono audio, repeat the same procedure but press **VOL-.**

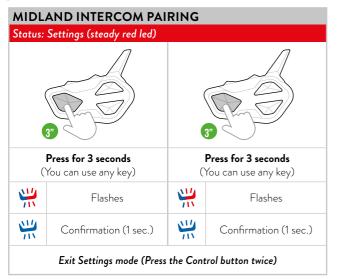

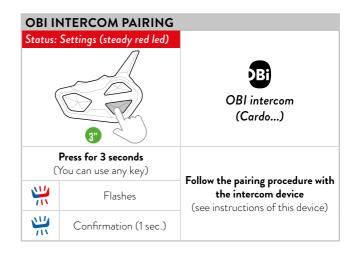

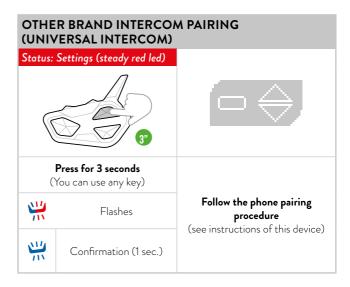

PAIRINGS

PAIRING 4 UNITS IN CONFERENCE Status: Settings (steady red led) 2 3" 4

Note: the Conference allows the simultaneous communication amongs Midland units. Units must be paired in a "chain" configuration.

Down Button of Unit 1 with **Up Button** of Unit 2 **Down Button** of Unit 2 with **Up Button** of Unit 3 **Down Button** of Unit 3 with **Up Button** of Unit 4

	Press	together for 3 seconds
3"	<u> </u>	Веер
	111	Confirmation (1 sec.)
	_	Steady

EXIT SETTINGS MODE INTERRUPT PAIRING Status: Settings (steady red led) Press twice

Frequency (GHz)	Max power (mW)
2.402 - 2.480	100

Go to our website midlandeurope.com, download the complete manual and the BT Updater software.

Customize your intercom and discover all the functions with the **Midland Connect**.

Download it here:







Blinking changes




A. Intercom Mode: to communicate with another device.

B. Phone Mode: for phone calls or for managing music.

C. FM Radio Mode: to listen to radio, search and store stations.

Note: Phone mode and Intercom mode are enabled only when your intercom is paired to other devices.

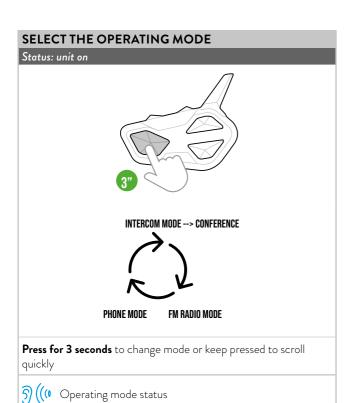


Note: By pressing briefly **Vol** + and **Vol** - together, BTR1 Advanced communicates the selected operating mode.


INTERCOM MODE

FUNCTIONS DESCRIPTION

Press once the keys to activate:

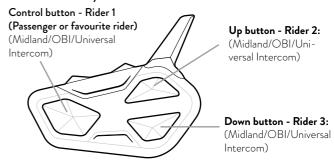


SHORTCUT: in Intercom mode press twice the buttons for the phone functionalities.

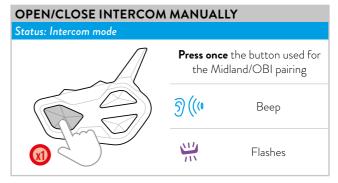


Note: to communicate with Rider 2-3 repeat the procedure by pressing **Up** (Rider 2) / Down (Rider 3).


INTERCOM MODE

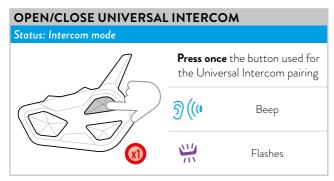


Note: to open/close the audio from a **different brand device**, use the voice call command (for some models it is necessary to send the voice call twice)

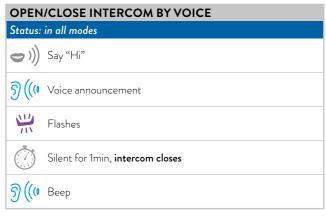

Note: the voice activation is possible only with an intercom paired to the **Control button-Rider 1 (VOX must be active)**

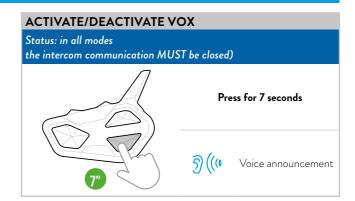

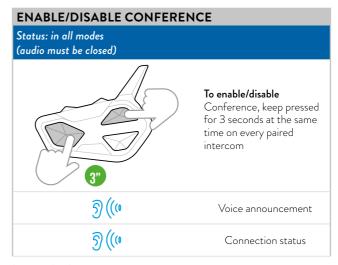

Note: in Conference mode, the deviced paired with Vol+/Vol- are temporarily dosconnected.

INTERCOM MODE

OPEN/CLOSE CONFERENCE

Status: Conference



Press once **opens/closes** Conference with the unit paired to **Down button**



Press once **opens/closes**Conference with the unit paired to **Up button**




Press once opens automatically Conference to all paired units

PHONE MODE

DESCRIZIONE FUNZIONI

Press once the buttons to activate:

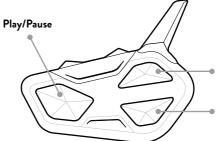


(Phone on Vol+)

- Call
- Answer
- End
- Next song

(Phone on Vol-)

- Call
- Answer
- End
- Previous track

SHORTCUT: in Phone mode press twice for the Intercom functionalities.

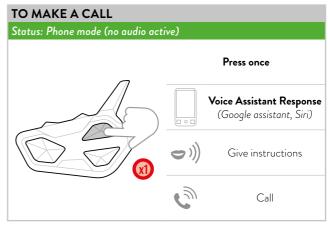


Note: if your phone is paired with **Vol-**, press the **Down button**.

PHONE MODE

TO ANSWER/END/REJECT A CALL Status: all modes Press once any key to answer/end a call 3" Press for 3 sec, to reject a call

Note: if your phone is paired with **Vol-**, press the **Down button**.

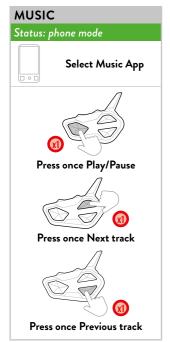





RADIO MODE

FUNCTION DESCRIPTION

 Press once the buttons:



SHORTCUT: in Radio mode press twice the buttons for the Intercom functionalities.

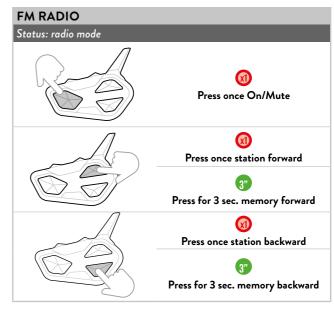

Note: with FM radio mute, press once the **Up** or **Down buttons** to activate the voice call.