




BTR1 ADVANCED X

QUICK GUIDE




ON/OFF


CONTROLS DESCRIPTION

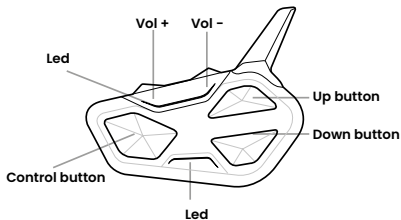

SWITCH ON

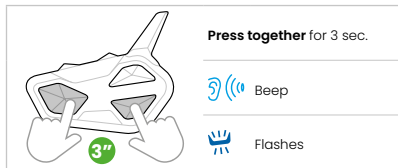


SWITCH OFF

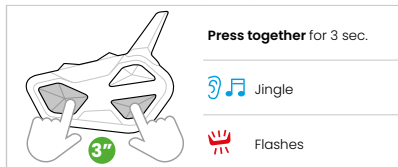

PAIRINGS

CONTROLS DESCRIPTION

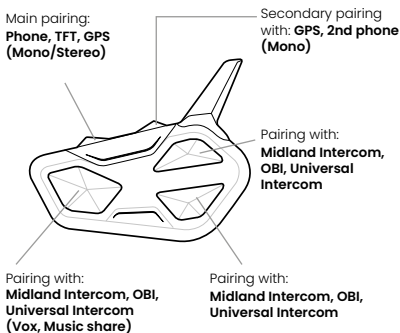

Note: the audio source paired to **VOL+** button (Music or navigator's indications) remains in background to the intercom communication opened between two people.

PAIRINGS

PHONE, GPS, TFT PAIRING

Status: device on



Press 5 sec.



Beep



Flashes



Select BTR1 Advanced in your phone, GPS or TFT



Beep



Confirmation (1 sec.)

Note: to pair a second device in audio mono mode, repeat the same procedure but press **Vol-**.

PAIRING WITH MIDLAND INTERCOM

Status: device on



Press 7 sec.
(you can press any key)



Flashes



Confirmation (1 sec.)



Press 7 sec.
(you can press any key)



Flashes



Confirmation (1 sec.)

PAIRING WITH OBI INTERCOM

Status: device on



Press 7 sec.
(you can press any key)



Flashes



Confirmation (1 sec.)



OBI intercom
(Cardo...)

Follow the intercom pairing procedure (see intercom's instructions)

UNIVERSAL INTERCOM PAIRING

Status: device on



Press 7 sec.
(you can press any key)



Flashes



Confirmation (1 sec.)



Follow the phone pairing procedure (see intercom's instructions)

Attention: you can pair a maximum of 3 intercom devices (Midland, OBI or other brand), one for each button.
A new pairing on the same button overwrites the previous one.

PAIRINGS

BLUETOOTH PAIRING RESET

Status: device on



Press together 5 sec.



Voice announcement



Steady



Press together for 3 sec.



Beep



Confirmation (1 sec.)

FACTORY SETTINGS RESET

Status: device on




Press together 5 sec.



Voice announcement



Steady

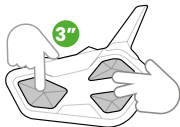

Press together for 3 sec.



Beep



Confirmation (1 sec.)

INTERCOM FUNCTIONALITY

The “Intercom” communication allows you to talk to one person at a time through any of the paired intercoms or to talk to more than one intercom device at the same time (Conference mode).



Intercom communication one person at a time

When the intercom communication is already open to one person, first close it and only then open the Intercom communication to another person.



Conference mode


When the intercom communication already open to one person, just open the intercom to a second person without closing the first conversation. In Conference mode you can talk up to 4 people in a chain (Conference to 4). Each intercom device can have two communications open simultaneously.

Note: in the device with the Conference mode activated (intercom open to other two devices), the phones/GPS may be momentarily disconnected and automatically reconnected when the communication is closed.

INTERCOM FUNCTIONALITY

FUNCTIONS DESCRIPTION

Up button – Rider 2:
(Midland/OBI/Universal Intercom)

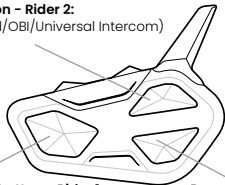


Control button – Rider 1
(Midland/OBI/
Universal Intercom)


Down button – Rider 3
(Midland/OBI/
Universal Intercom)


Intercom functions are accessed by pressing twice the buttons corresponding to the pairings.

OPEN/CLOSE INTERCOM AND OBI MANUALLY

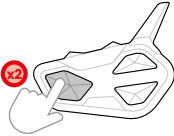






Press twice (the button corresponding to the pairing)

 Beep

 Flashes


Note: to talk with Rider 2 or Rider 3 repeat the procedure but press the buttons corresponding to the pairings.

OPEN INTERCOM BY VOICE (VOX)


	Say "Hello"
	Jingle
	Flashes
	Silent for 1 minute; intercom closes
	Beep


Note: the voice activation is possible only with an intercom paired to the **Control button–Rider 1** (VOX must be active)

TO OPEN/CLOSE UNIVERSAL INTERCOM



Press twice (the button corresponding to the pairing)

 Beep

 Flashes

Note: to open/close the audio from **the different brand device**, use the voice call command (for some models it is necessary to send the voice call twice).

INTERCOM FUNCTIONALITY

TO ENABLE/DISABLE VOX (Open Intercom by voice)



Press together for 3 sec.



Voice
announcement

NOISE GATE ENABLE/DISABLE (Mutes microphone in absence of voice)



Press together for 3 sec.



Voice
announcement

AGC ENABLE/DISABLE (volume automatic adjustment according to speed)




Press together for 3 sec.



Voice
announcement


PHONE FUNCTIONALITY

FUNCTIONS DESCRIPTION

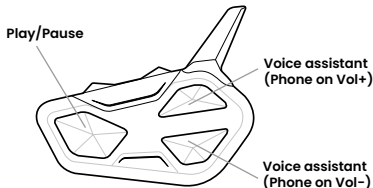

Phone functions are accessed by pressing once on the buttons.

TO ACTIVATE VOICE ASSISTANT (no audio active)

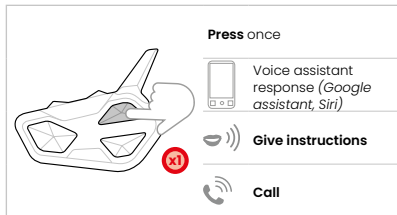

Note: If your phone is paired to Vol-, use the **Down button**.

PHONE FUNCTIONALITY

ANSWERING/ENDING/REJECTING A CALL



Press once to answer/end a call



Press for 3 sec. to reject a call

Note: you can press any key.

MUSIC SHARE WITH PASSENGER



Select music App

Open Midland intercom (manually or by voice)



Press for 3 sec



Voice announcement

Note: it is possible to share music only with a Midland intercom.

MUSIC



Select music App



Press once Play/Pause



Press once Next track



Press once Previous track

Frequency (GHz)

Max power (mW)

2.402 - 2.480

100

FM RADIO FUNCTIONALITY

FUNCTIONS DESCRIPTION



x3

Press 3 times On

x1

Press once Off



x1

Press once
Next station

3"

Press for 3 sec.
Next stored station



x1

Press once
Previous station

3"

Press for 3 sec.
Previous stored station

Attention: to use the phone functions, the FM radio must be switched off. The intercom functions are always available by pressing twice the corresponding buttons.



Scan the QR code to access the support page, update the software and find all info about BTR1 Advanced X, including video tutorial and installation.

Midland World



Download Midland Connect from
App Store or Google Play

