


# Come funziona radio FM su MIDLAND G18

RADIO:

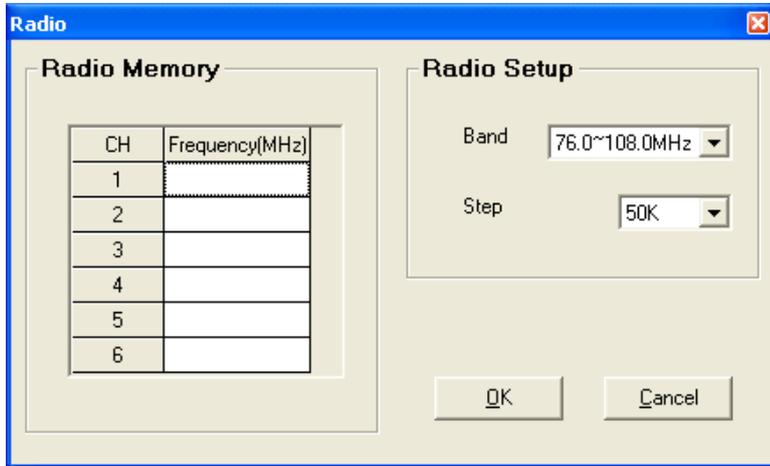

Band = viene scelto il range di funzionamento della radio FM, è possibile scegliere na delle seguenti bande:

87.5~108Mhz

76~91Mhz

76~108Mhz

65~76Mhz

Step = si seleziona lo scostamento della radio FM (50/100Khz)

Radio Memory = è possibile inserire fino a 6 stazioni radio preferite sempre all'interno della banda selezionata.

Per richiamare queste stazioni occorre essere in modalità RADIO e utilizzare combinazione di tasti come descritto di seguito:

1= premere brevemente VFO/MR e poi tasto FUN (sopra il PTT)

2 = premere brevemente VFO/MR e poi tasto PF3 (sotto il PTT)

3 = premere brevemente VFO/MR e poi tasto PF4

4 = premere brevemente VFO/MR e poi tasto MENU


5 = premere brevemente VFO/MR e poi tasto ENTER

6 = premere brevemente VFO/MR e poi tasto EMERGENZA (rosso)

Per tornare al menù principale tenere premuto per circa 5 secondi il tasto VFO/MR

# How radio FM works on MIDLAND G18

RADIO:

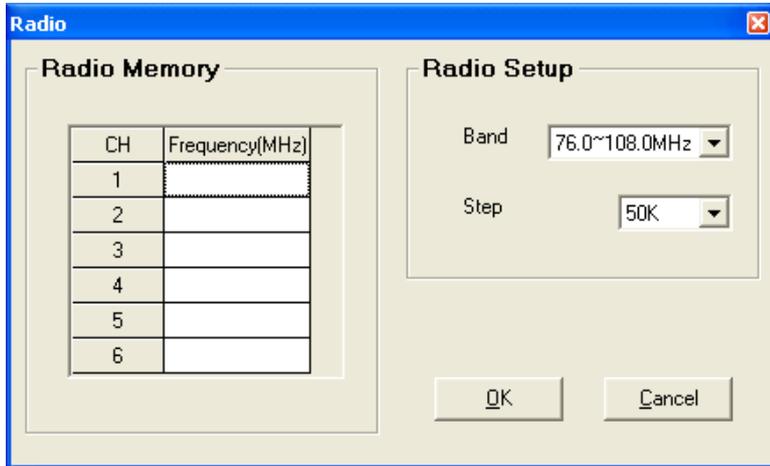

Band = select the range of broadcast radio:

87.5~108Mhz

76~91Mhz

76~108Mhz

65~76Mhz

Step = select the shift frequency of radio FM (50/100Khz)

Radio Memory = 6 memory can save in the radio.

To recall these memory use a combination key sas described below:

1= short press VFO/MR then FUN button (above side PTT)

2 = short press VFO/MR then PF3 button (below PTT)

3 = short press VFO/MR then PF4

4 = short press VFO/MR then MENU

5 = short press VFO/MR then ENTER

6 = short press VFO/MR then EMERGENZA (rosso)

To back main menu keep pressed VFO/MR button for 5 seconds.